

Analog-Digital Belt Watch

Model No. 6500



FUNCTION READING (DIGITAL)

Normal Display:

Hour, minutes, seconds and day of the week

Push D: For alarm time

Push B: For mode

Push C: For month and date

SETTING THE ANALOG WATCH TIME

Pull the crown out to the first click and set the time.

When finished push the crown in.

NORMAL TIME AND DATE SETTING

In normal time mode push B three times to switch to normal time and date setting.

(The day "Tue" should be flashing)

Push **D** to select the flashing digits of seconds, minutes, hours, day, month.

Push **C** to advance the respective digits. Select 12/24 hours mode by advancing the hour digits until AM or PM will be shown in the display for 12 hours mode or none of AM/PM will be shown. (24 hours mode)

Push **B** to return to normal time.

CHIME ON/OFF

Hold **D**, push **B** in normal time mode.

All day names appear = chime ON,
all day names disappeared = chime OFF.



ALARM ON/OFF

Hold **D**, push **C** in normal time mode.

If sound icon appears =
alarm ON, if sound icon
disappears = alarm OFF.


SETTING THE ALARM

In normal time mode push B twice to switch to alarm time setting. Note: You can only set the alarm to go off on a specific day. If set, the alarm will chime at the same time everyday. After you set the alarm to the time you want and the alarm starts to chime, push **D** to stop alarm chime sound.

Push **D** to switch between hours and minutes.

Push **C** to advance the respective digits.

Push **B** again to return to normal time.

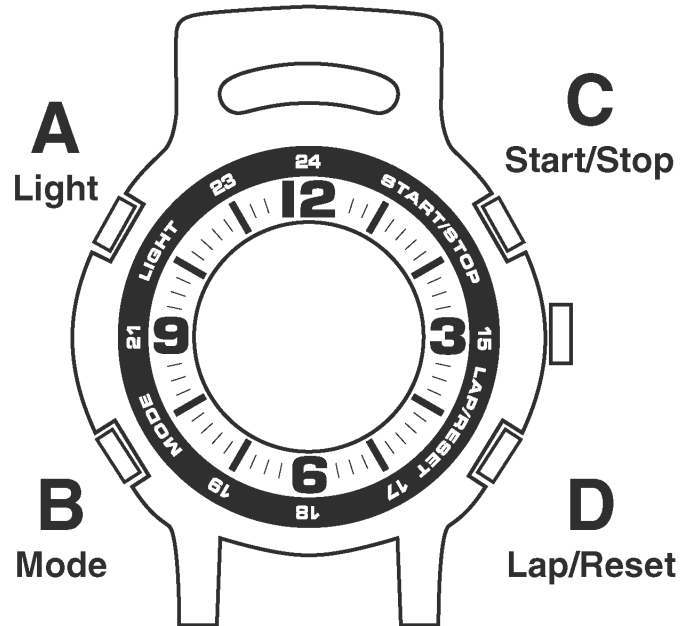

STOP WATCH FUNCTION

Push **B** once when in normal time mode to switch to stopwatch mode.

Push **C** for start/stop function.

Push **D** while counting for lap (split) time and push **D** again to resume counting.

Push **C** to stop and **D** to clear when stopped counting to reset to zero.

CARE AND FEEDING

Avoid exposing your watch to water, steam, or other forms of moisture if it is non-water-resistant. If the crystal/lens becomes damaged, have it replaced at once to avoid damage to the module. When your battery is depleted, have it replaced promptly.

BATTERY REPLACEMENT

When readout becomes dim, or there is no display, it is time to replace the battery. Replace with: UCC 392, Renata 2 or Toshiba LR41 or equivalent.

GuardDog Watch and Clock, LLC strongly recommend taking your watch to a local watch retailer, jeweler or watch repair service to have the battery replaced. Opening the case back without specialty tools and expertise is likely to result in damage.

SERVICE

If your GuardDog™ watch should ever need servicing, send it with a copy of your original receipt to:

GuardDog Watch Service

Parsec Enterprises, Inc.

7501 N. Harker Dr. Peoria, IL 61615

Phone: 309-689-6531

Fax: 309-689-6543

Toll Free: 800-359-2508.

Please include a check or money order for \$8.95 to cover S/H made payable to Parsec Enterprises. Non-warranty repairs, including battery, crystal or strap replacement, can be quoted by calling 800-359-2508.

Because of possible loss, we recommend insuring your watch, return receipt requested, when using the mails.

If you do not obtain a receipt within a reasonable time, start a tracer through the originating post office. Never include a special watchband or any other article of personal value in your shipment. Please note that we may substitute a watch of equal value and similar appearance for yours on both in-warranty and out-of-warranty repairs.